


GFS-200- SERIES SOLAR PANEL STONE GUARD INSTALLATION


IMPORTANT MOUNTING HEIGHT ILLUSTRATED IN STEP 6*

1

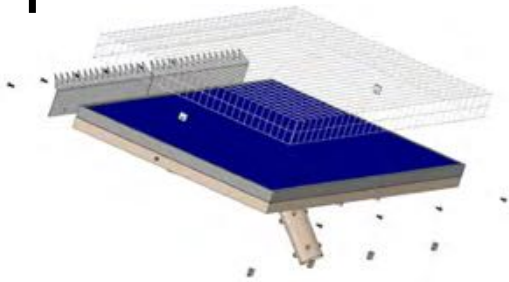


Place Solar panel Stone Guard completely over panel leaving 30-35mm clearance between mesh and solar panel glass.

2

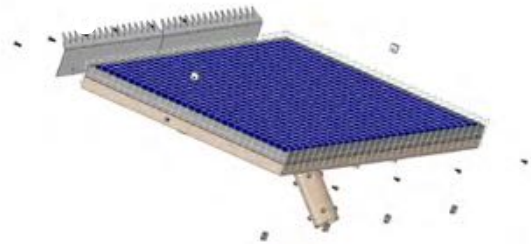

Secure bird guard to panel frame using 6 x M6 bolts.

3

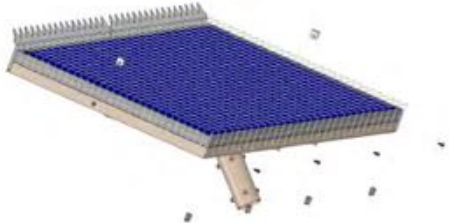


Secure clasps around edge of stone guard mesh and attach with self tapping screws.

4



Secure Clasps using self-tapping screws along bottom edge of panel.

5

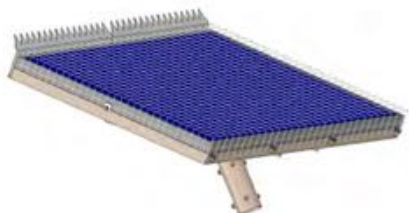


Installation Complete! - Please note mounting procedure in step 6*

[VIDEO INSTALLATION HERE](#)

Click on the "How Does it Work" Tab

6*

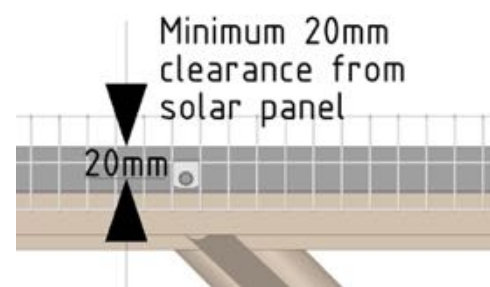

MINIMUM CLARANCE 20mm FROM TOP OF PANEL TO AVOID DRILLING INTO GLASS CAUSING DAMAGE.